

SCHLAGE

ALLEGION

Keypad Locks

User Guide



BE365




~~FE575/FE595~~

LOCK PARTS

Keypad Deadbolt

Model BE365

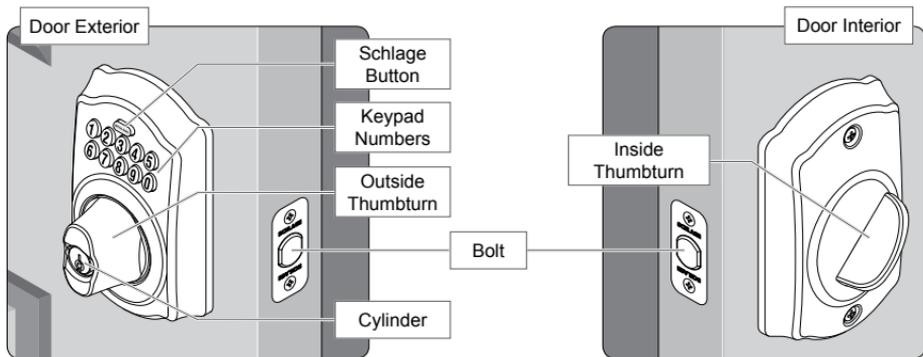

ENGLISH

Keypad

- Used to enter codes for programming and unlocking. See **Programming Guide** on page 10 and **Locking and Unlocking** on page 6 for more information.

Outside Thumbturn

- Used to unlock the lock after a valid User Code has been entered, or to lock the lock after the Schlage button has been pressed.

Cylinder

- Used only in emergency situations to unlock the lock. See **Key Override** on page 7.

Inside Thumbturn

- Used to lock or unlock the lock.

KEYPAD DEADBOLT


MODEL BE365

Locking and Unlocking

From the outside:

To Lock

1. Press the Schlage button.*
2. Rotate the thumbturn away from the hinges.

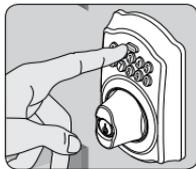

To Unlock

» If lighting is low, press the Schlage button to illuminate the keypad before beginning.

1. Enter a User Code into the keypad.
2. Rotate the thumbturn toward the hinges.

